

REX - C100

REX - C400

REX - C410

REX - C700

REX - C900

INITIAL SETTING MANUAL

RKC RKC INSTRUMENT INC.



F.M FRANKLIN PTY LTD

PH. (07) 3391 4865

This is a manual for the initial setting of the REX-C100, -C400, -C410, -C700, & -C900. Do not touch or adjust parts other than those covered in this manual. The instrument was manufactured and delivered under close quality control by us. However, if some subject troubled or noted, your kindly announce and advice to our business department, nearest business office also agent where you bought is very much appreciated.


CONTENTS

	Page
1. Initial set mode changing	
1.1 Entering the initial set mode	1
1.2 Exiting the initial set mode	2
2. Setting	
2.1 Description of each parameter	3
2.2 Each parameter setting	4
(1) Input type selection [51_1]	5
(2) Engineering unit and cooling type selection [51_2]	6
(3) Selection of break alarm (HBA, LBA) etc. [51_3]	7
(4) First alarm (ALM1) type selection [51_4]	8
(5) Second alarm (ALM2) type selection [51_5]	9
(6) Control output selection etc. [51_6]	11
(7) Energize/de-energize alarm selection etc. [51_7]	12
(8) PV bias setting [71_1]	13
(9) Differential gap setting of ON/OFF action [71_1]	13
(10) Differential gap setting of first alarm (ALM1) [71_1]	13
(11) Differential gap setting of second alarm (ALM2) [71_2]	13
(12) High-limit setting for set-value (SV) [51_4]	14
(13) Low-limit setting for set-value (SV) [51_4]	14
2.3 Each parameter checks	15



1. Initial set mode changing

1.1 Entering the initial set mode

- (1) Press the **(SET)** key to display the set data locking parameter symbol ($L L L$) on the measured-value (PV) display unit. At this time, the least significant digit on the set-value (SV) display unit lights brightly. The digit which lights brightly is settable.

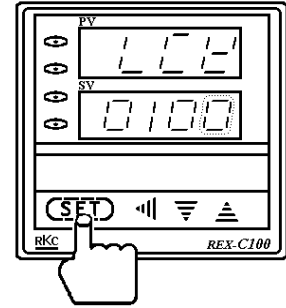


- (2) Press the \lll key to shift the digit which lights brightly up to the hundreds digit. The digit which lights brightly shifts as follows every time the \lll key is pressed.

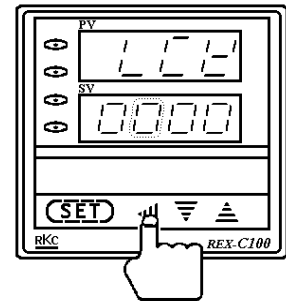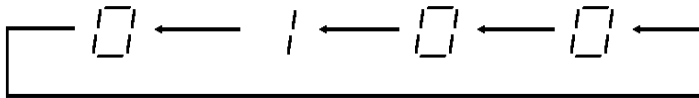


- (3) Press the ∇ key to set " $L L L$ ". Pressing the \triangle key increments numerals, and pressing the ∇ key decrements numerals.

00000 : No initial set mode locked

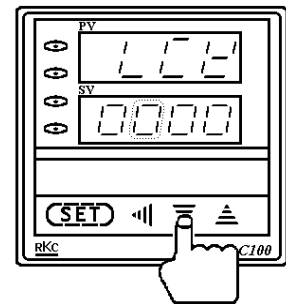

- (4) Hold both the \lll (A) and **(SET)** (B) keys simultaneously until $L L L$ appears.

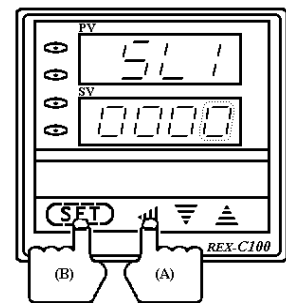


Initial set status


Cautions

1. In order to enter the initial set mode, always set the data locking ($L L L$) to " 00000 ". Any setting other than " 00000 " cannot enter the initial set mode.
2. If the controller is set to the initial set mode, all outputs are turned OFF.
3. An example of the REX-C900 is described here, but the same procedure applies to other controllers (REX-C100, -C400, -C410, and -C700).

1.2 Exiting the initial set mode

(1) Exits from the initial set mode


Keep pressing both the  key (A) and **(SET)** (B) keys simultaneously for more than 5 seconds can enter the PV/SV display mode.

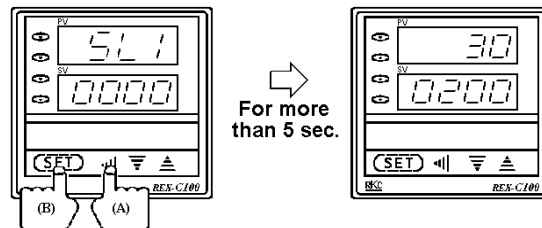

* Even if the controller exits from the initial set mode at any point, the setting mode so far set becomes valid.

(2) Locks the initial set mode (Change the content of set data lock setting)

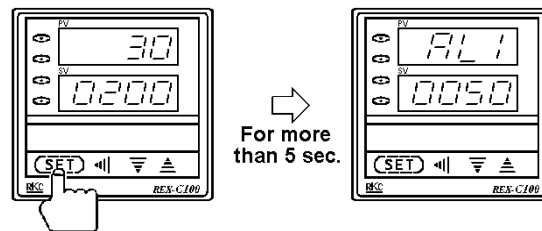

1. Press the **(SET)** key to enter the parameter setting mode.



2. Press the **(SET)** key by required number of times to show “

3. Press the key and keys to set “ key and keys leads to the lock symbol display showing PV:

Caution

If the controller exits from the initial set mode, confirm that set data lock setting is set to “ 

< Each status when power failure occurs in the initial set mode >

- Setting prior to power failure is valid
- Instantaneous power failure (within 20 msec.) does not exert bad influence on the instrument.
- If long power failure occurs, the instrument exits from its initial set mode. After power recovery, the instrument is set to the PV/SV display mode. The measured-value (PV) at this time shows that at the time of power recovery, and the set-value (SV) is the same as that before power failure.

2. Setting

2.1 Description of each parameter

“*SL 1*” appears on the display, and every press of the **SET** key advances the parameter symbol as shown in the following table. After one cycle, the display shows “*SL 1*”.


MEASURED-VALUE (PV) DISPLAY UNIT	SETTING DESCRIPTION
<i>SL 1</i>	Input type selection
<i>SL 2</i>	Engineering unit selection (°C, °F)
<i>SL 3</i>	Heater break alarm (HBA) selection Control loop break alarm (LBA) selection Special specification [Z-132] selection Selection of control loop break alarm output terminals
<i>SL 4</i>	First alarm (ALM1) type selection First alarm (ALM1) hold action selection
<i>SL 5</i>	Second alarm (ALM2) type selection Second alarm (ALM2) hold action selection
<i>SL 6</i>	Direct / reverse action selection Control action type selection Control output type selection (Heating / cooling side)
<i>SL 7</i>	Energize / de-energize alarm selection Special specification [Z-124] selection
<i>SL 8</i>	“ <i>SL 8</i> ” cannot be set.
<i>PH</i>	PV bias setting
<i>GH</i>	Differential gap setting of ON / OFF action
<i>PH 1</i>	Differential gap setting of first alarm (ALM1) * No display appears when no first alarm (ALM1) function is provided.
<i>PH 2</i>	Differential gap setting of second alarm (ALM2) * No display appears when no second alarm (ALM2) function is provided.
<i>SL H</i>	High-limit setting for set-value (SV)
<i>SL L</i>	Low-limit setting for set-value (SV)

SET



2.2 Each parameter setting

○ Method of setting

- (2) Press the **(SET)** key to display the input type selection parameter symbol ($\overline{5} \overline{L} \overline{1}$) on the measured-value (PV) display unit. At this time, the least significant digit on the set-value (SV) display unit lights brightly. The digit which lights brightly is settable.

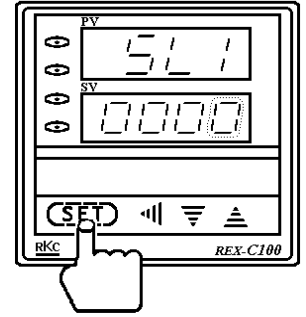


- (3) Press the \lll key to shift the digit which lights brightly up to the tens digit. The digit which lights brightly shifts as follows every time the \lll key is pressed.

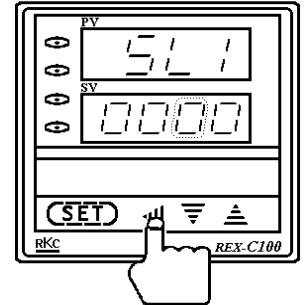

- (4) Press the \triangle key to set “ $\#$ ”. Pressing the \triangle key increments numerals, and pressing the ∇ key decrements numerals.


$\overline{00} \overline{10}$: Thermocouple type L

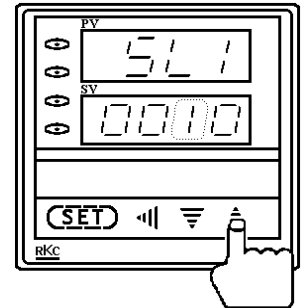

- (5) After finishing the setting, press the **(SET)** key to register (shifts to next parameter).


Cautions

1. If no key operation is performed for more than 60 sec. during setting or when any parameter other than “ $\overline{5} \overline{L} \overline{1}$ ” is displayed, the display returns to “ $\overline{5} \overline{L} \overline{1}$ ”.
2. An example of the REX-C900 is described here, but the same procedure applies to other controllers (REX-C100, -C400, -C410, and -C700).

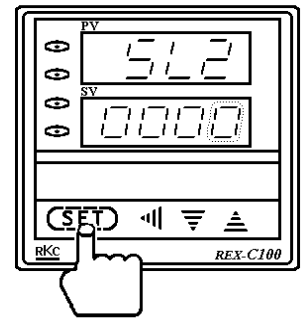

(2) Engineering unit and cooling type selection ($\overline{E1}_1 \overline{E1}$)

Set-value (SV) display unit



VALUE	DESCRIPTION
$\overline{0} \overline{0} \overline{0} \overline{0}$	°C
$\overline{0} \overline{0} \overline{0} \overline{1}$	°F
$\overline{0} \overline{0} \overline{0} \overline{2}$	Air-cooling (Type A) * 1
$\overline{0} \overline{0} \overline{0} \overline{1}$	Water-cooling (Type W) * 2
$\overline{0} \overline{0} \overline{0} \overline{0}$	Fixed

* 1 Type A : Heating / cooling PID action (Air-cooling)

* 2 Type W : Heating / cooling PID action (Water-cooling)

Cautions

1. For the voltage and current input types, the engineering unit setting of °C or °F is ignored.
2. When control action is of the type D (PID action [direct action] or type F (PID action [reverse action]), “Cooling type selection” setting is ignored.
3. Do not set the upper 2 digits to numeric values other than “ $\overline{0} \overline{0}$ ” since they are not used.
4. “ $\overline{E1}_1 \overline{E1}$ ” setting displays are only “ $\overline{0} \overline{0}$ ” and “ $\overline{1}$ ”.

(3) Selection of break alarm (HBA, LBA) etc. ($\overline{E}1$ \overline{L} \overline{Z})

Set-value (SV) display unit

--	--	--	--

VALUE				DESCRIPTION	
			$\overline{E}1$	Without HBA function	Heater break alarm (HBA) selection
			\overline{L}	With HBA function	
		\overline{L}		Without LBA function	Control loop break alarm (LBA) selection
		$\overline{E}1$		With LBA function	
	$\overline{E}1$			Without Z-132 specification	Special specification [Z-132] selection
	\overline{L}			With Z-132 specification *	
$\overline{E}1$				First alarm side	Selection of control loop break alarm output terminals
\overline{L}				Second alarm side	

* Z-132 specification : Heater break alarm output is delayed.

Cautions

1. “With HBA function” setting is ignored for the following instruments :
 - Instrument with deviation or process alarm as the second alarm (ALM2)
 - Instrument with control loop break alarm (LBA)
 - Instrument whose control output is the current output type

2. “With LBA function” setting is ignored for the following instruments :
 - Instrument with deviation or process alarm as the first alarm (ALM1) and second alarm (ALM2)
 - Instrument with heater break alarm (HBA)
 - Instrument whose control action is type W (Heating / cooling PID action [Water-cooling]) or type A (Heating / cooling PID action [Air-cooling]).

3. For the instrument without heater break alarm (HBA), “With Z-132 specification” setting is ignored.

4. “ $\overline{E}1$ \overline{L} \overline{Z} ” setting displays are only “ $\overline{E}1$ ” and “ \overline{L} ”.

(4) **First-alarm (ALM1) type selection** (E1_4)

Set-value (SV) display unit

--	--	--	--

VALUE				DESCRIPTION		
	□	□	□	No first alarm		
	□	□	!	Deviation alarm	First alarm (ALM1) type selection (See page 10)	
	!	□	!			Low alarm
	□	!	□			High / Low alarm
	!	!	□			Band alarm
	□	!	!	High alarm		Process alarm
	!	!	!	Low alarm		
□				Without alarm hold action		First alarm (ALM1) hold action selection
!				With alarm hold action		

Cautions

- The following instrument is set to “□□□□”.
 - Instrument without the first alarm (ALM1).
 - Instrument which outputs control loop break alarm (LBA) from the first alarm side. (E1_3 setting details : For “□□□□”]
- “E1_4” setting displays are only “□” and “!”.

(5) Second-alarm (ALM2) type selection ($\overline{S1}$ $\overline{S2}$)

Set-value (SV) display unit

--	--	--	--

VALUE	DESCRIPTION		
0 0 0	No second alarm		Second alarm (ALM2) type selection (See page 10)
0 0 1	High alarm	Deviation alarm	
1 0 1	Low alarm		
0 1 0	High / Low alarm		
1 1 0	Band alarm		
0 1 1	High alarm	Process alarm	
1 1 1	Low alarm		
0	Without alarm hold action		Second alarm (ALM2) hold action selection
1	With alarm hold action		

- Instrument without the second alarm (ALM2).
- Instrument with the heater break alarm (HBA).

Cautions





1. The following instrument is set to “| 0 | 0 | 0 |”.
 - Instrument without the second alarm (ALM2).
 - Instrument with the heater break alarm (HBA).
 - Instrument which outputs control loop break alarm (LBA) from the second alarm side. ($\overline{S1}$ $\overline{S2}$ setting details : For “| 0 | 0 | 1 |”]

2. “ $\overline{S1}$ $\overline{S2}$ ” setting displays are only “| 0 |” and “ # ”.



ALARM TYPES

[◆ : Set-value (SV) Δ : Alarm set-value ■ : Alarm status (ALM1 or ALM2 LED lighting)]

< DEVIATION ALARM >

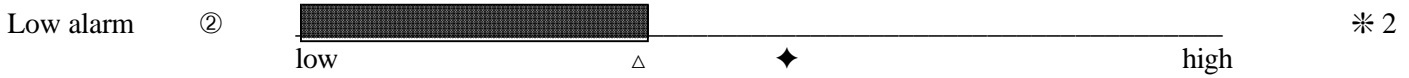

< PROCESS ALARM >



- * 1 Alarm status where the alarm set-value is set to plus (+) side for the set-value (SV).
- * 2 Alarm status where the alarm set-value is set to minus (-) side for the set-value (SV).
- * 3 Status when alarm is activated at 2 equal deviation points from the set-value (SV) with the alarm set-value (absolute deviation) is set.

(6) Control-output selection etc. ($\overline{2}$ $\overline{1}$ $\overline{2}$)

Set-value (SV) display unit

--	--	--	--

VALUE	DESCRIPTION
□	Direct action (Type D) Direct / reverse action selection
!	Reverse action (Type F, A, W)
□	PID action (Type D, F) ※ 1 Control action
!	Heating / cooling PID action (Type A, W) ※ 1 type selection
□	Time proportional output (M, V, G output) ※ 2 Control output type
!	Continuous output (Current 4 to 20 mA DC) selection (Heating side)
□	Time proportional output (M, V output) ※ 2 Control output type
!	Continuous output (Current 4 to 20 mA DC) selection (Cooling side)

- ※ 1 Type D : PID action [Direct action]
 Type F : PID action [Reverse action]
 Type A : Heating / cooling PID action [Air-cooling]
 Type W : Heating / cooling PID action [Water-cooling]

- ※ 2 M output : Relay contact G output : Trigger (For triac driving)
 V output : Voltage pulse

Cautions

1. Conduct setting so as to meet the instrument specification. An incorrect setting may cause a malfunction.
2. When control action is of the type D or F, “Control output type selection (Cooling side)” setting is ignored.
3. For the REX-C100, always set the control action type selection to PID action.
4. “ $\overline{2}$ $\overline{1}$ $\overline{2}$ ” setting displays are only “ $\overline{1}$ ” and “ $\overline{!}$ ”.

(7) Energize / de-energize alarm selection etc. (E1_7)

Set-value (SV) display unit

--	--	--	--

VALUE	DESCRIPTION
□	Energize alarm Energize / de-energize alarm selection
!	De-energize alarm (First alarm side)
□	Energize alarm Energize / de-energize alarm selection
!	De-energize alarm (Second alarm side)
□	Without Z-124 specification Special specification [Z-124] selection
!	With Z-124 specification * (First alarm side)
□	Without Z-124 specification Special specification [Z-124] selection
!	With Z-124 specification * (Second alarm side)

* Z-124 specification : No alarm action caused by burnout is performed.

Cautions

1. Instrument without the first alarm (ALM1) and second alarm (ALM2) is set to "□□□□□".
 - Instrument without the first alarm (ALM1).
[E1_4 setting details : For "□□□□□"]
 - Instrument without the second alarm (ALM2).
[E1_5 setting details : For "□□□□□"]
2. "E1_7" setting displays are only "□" and "!".

(8) PV bias setting ($\overline{1-1}$)

Set-value (SV) display unit

--	--	--	--

(Setting range)

- (1) TC and RTD inputs
- For a resolution of 1°C [°F] : -1999 to 9999°C [°F]
 - For a resolution of 0.1°C [°F] : -199.9 to +999.9°C [°F]
- (2) Voltage and current inputs : -199.9 to +200.0%

(9) Differential gap setting of ON / OFF action [$\overline{1-1}$]

Set-value (SV) display unit

--	--	--	--

(Setting range)

- (1) TC and RTD inputs : 0 to 100 or 0.0 to 100.0
- (2) Voltage and current inputs : 0.0 to 10.0

(10) Differential gap setting of first alarm (ALM1) [$\overline{1-1}$]

Set-value (SV) display unit

--	--	--	--

(Setting range)

- (1) TC and RTD inputs : 0 to 100 or 0.0 to 100.0
- (2) Voltage and current inputs : 0.0 to 10.0

Caution

No display appears when no alarm function is provided.

[$\overline{1-1}$ setting : “□□□□□”].

(11) Differential gap setting of second alarm (ALM2) [$\overline{1-1}$]

Set-value (SV) display unit

--	--	--	--

(Setting range)

- (1) TC and RTD inputs : 0 to 100 or 0.0 to 100.0
- (2) Voltage and current inputs : 0.0 to 10.0

Caution - No display appears when no alarm function is provided.

[$\overline{1-1}$ setting : “□□□□□”].

2.3 Each Parameter checks

- (1) When all the settings are finished, press the **(SET)** key to check each parameter.
- (2) When the contents of the initial setting are changed, change the model code plate stuck to inside of the controller and outside of the case by referring to the following table.
- (3) After each parameter has been checked, return the controller to the control mode by referring to “1.2 Exiting the initial set mode” (P.2).

		MODEL CODE							DESCRIPTION
REX-	C100 C400 C410 C700 C900	G	G	G	G	G	G	G	48 x 48 mm 96 x 48 mm 48 x 96 mm 72 x 72 mm 96 x 96 mm
Control action		F D W A							PID action (Reverse action) PID action (Direct action) Heating / Cooling PID action (Water-cooling) ★ Heating / Cooling PID action (Air-cooling) ★
Input type		G							See page 16. Input Range Table “MODEL CODE”
Input range		G							See page 16. Input Range Table “MODEL CODE”
First control output [OUT(1)] (Heating side)				M V 8 G					Relay contact Voltage pulse Current 4 to 20mA DC Trigger (for triac driving)
Second control output [OUT(2)] (Cooling side)				None M V 8					No second control output (Control action : D, F) Relay contact ★ Voltage pulse ★ Current 4 to 20mA DC ★
First alarm (ALM1)				N A B C D E F G H J K L R					No first alarm (ALM1) Deviation high alarm (without hold action) Deviation low alarm (without hold action) Deviation high / low alarm (without hold action) Band alarm Deviation high alarm (with hold action) Deviation low alarm (with hold action) Deviation high / low alarm (with hold action) Process high alarm (without hold action) Process low alarm (without hold action) Process high alarm (with hold action) Process low alarm (with hold action) Control loop break alarm
Second alarm (ALM2)				N A B C D E F G H J K L P S					No second alarm (ALM2) Deviation high alarm (without hold action) Deviation low alarm (without hold action) Deviation high / low alarm (without hold action) Band alarm Deviation high alarm (with hold action) Deviation low alarm (with hold action) Deviation high / low alarm (with hold action) Process high alarm (without hold action) Process low alarm (without hold action) Process high alarm (with hold action) Process low alarm (with hold action) Heater break alarm (CTL-6) Heater break alarm (CTL-12)

* For the REX-C100, the content marked with ★ cannot be selection.

* When control output is trigger output for triac driving, only the first alarm is available (For the REX-C100).

